


JAVORINA



DESIGNED BY ROOTS

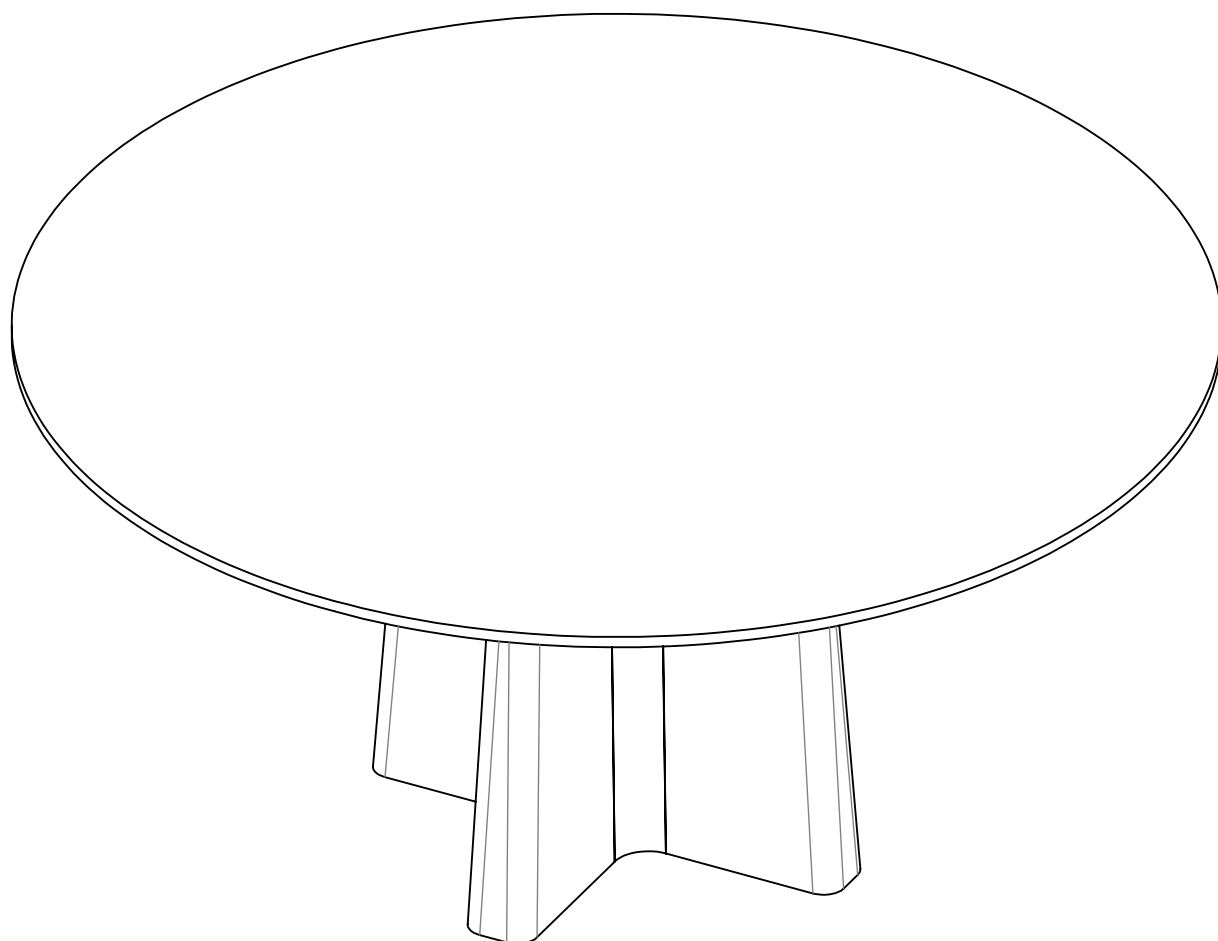


XXTR160

**assembly instructions
návod na montáž**


V000023-1

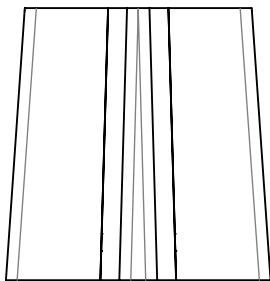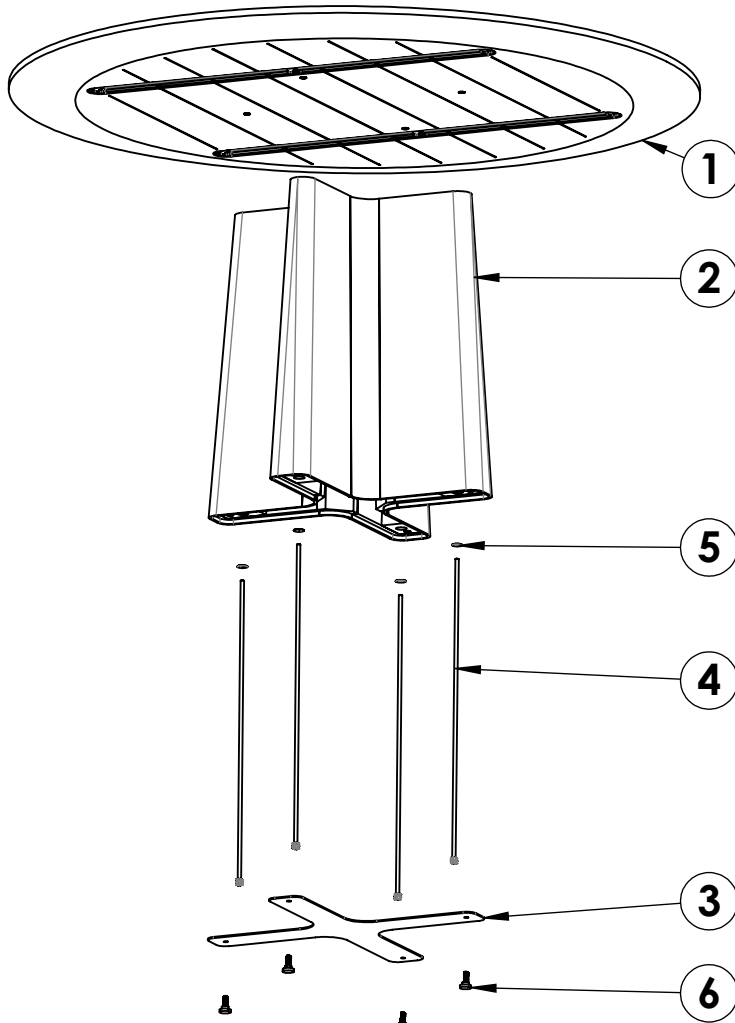

② 1x

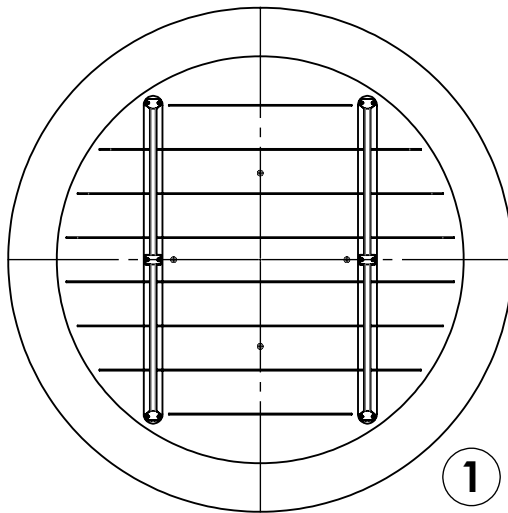


① 1x

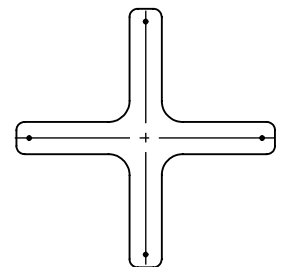



③ 1x




⑤ 4x

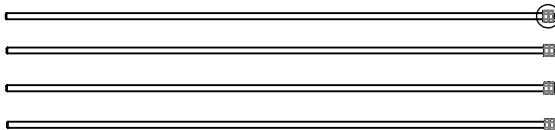


④ 4x M8

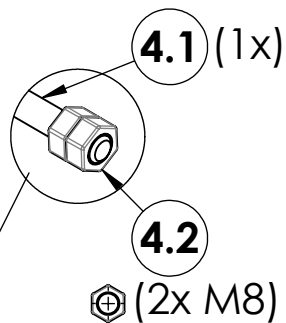


⑥ 4x M8



⑦ 1x >13<

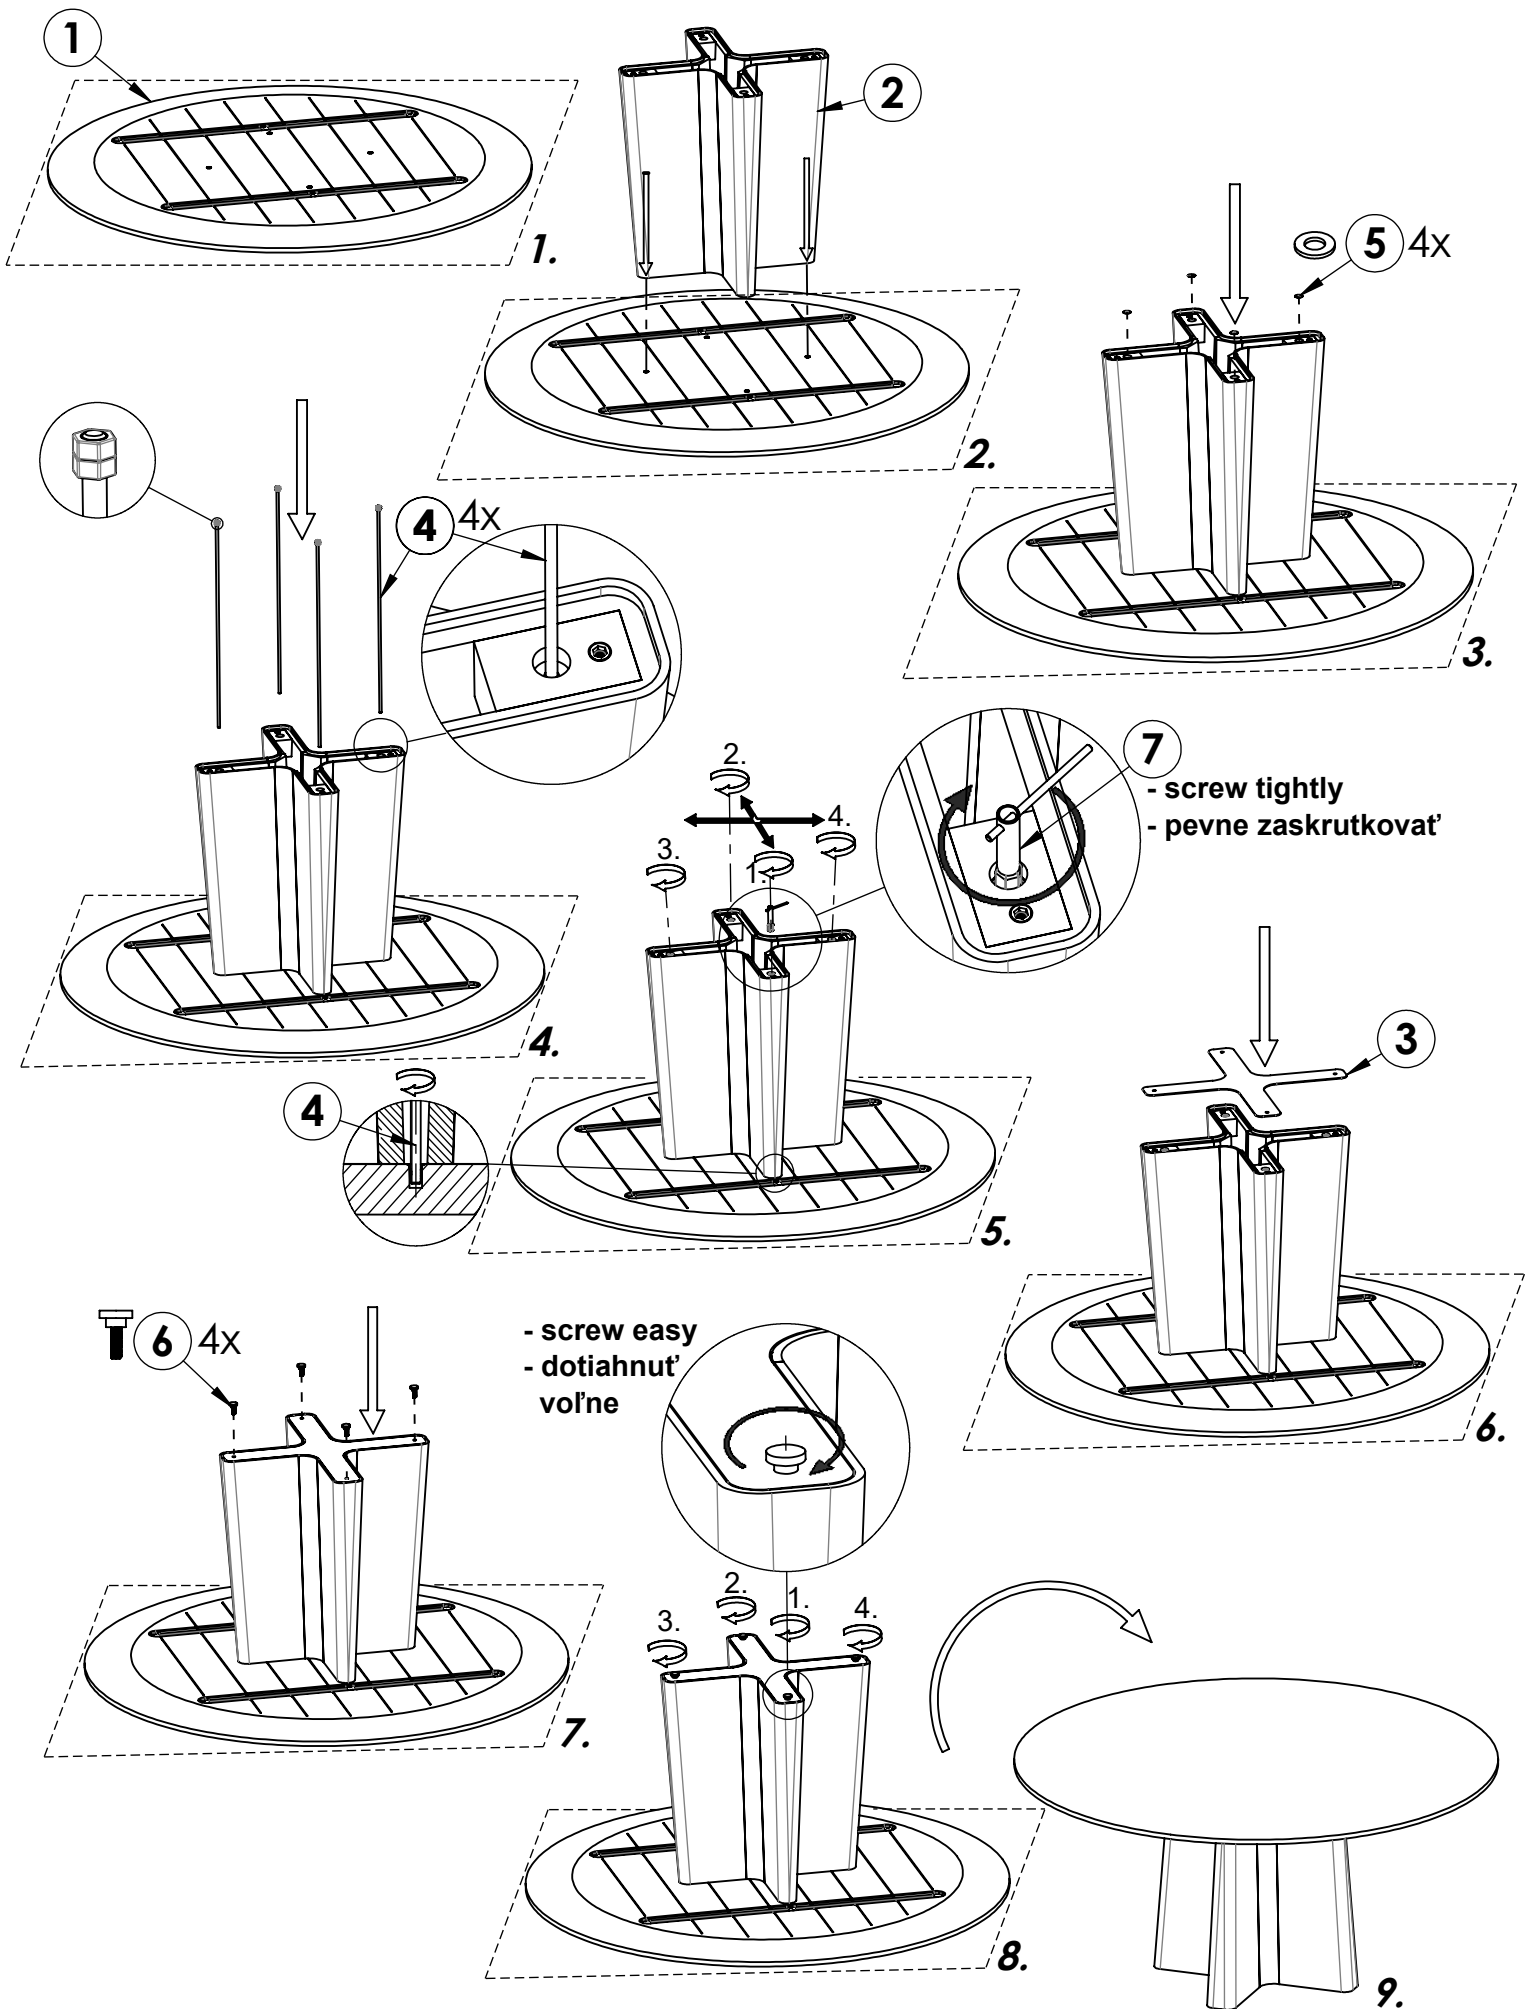

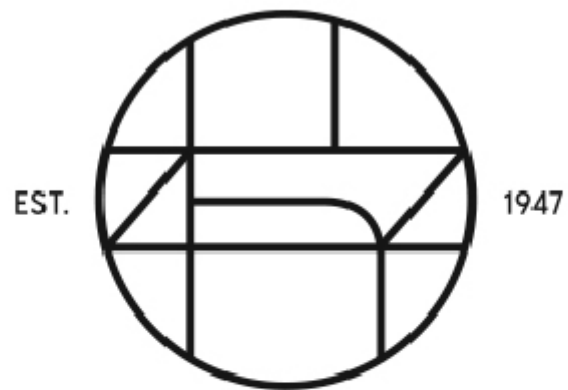

JAVORINA

DESIGNED BY ROOTS





XXTR125

**assembly instructions
návod na montáž**


V000022-1




15 min.

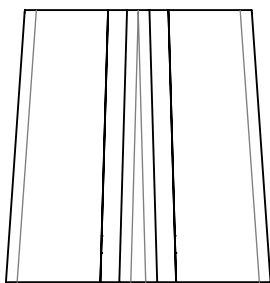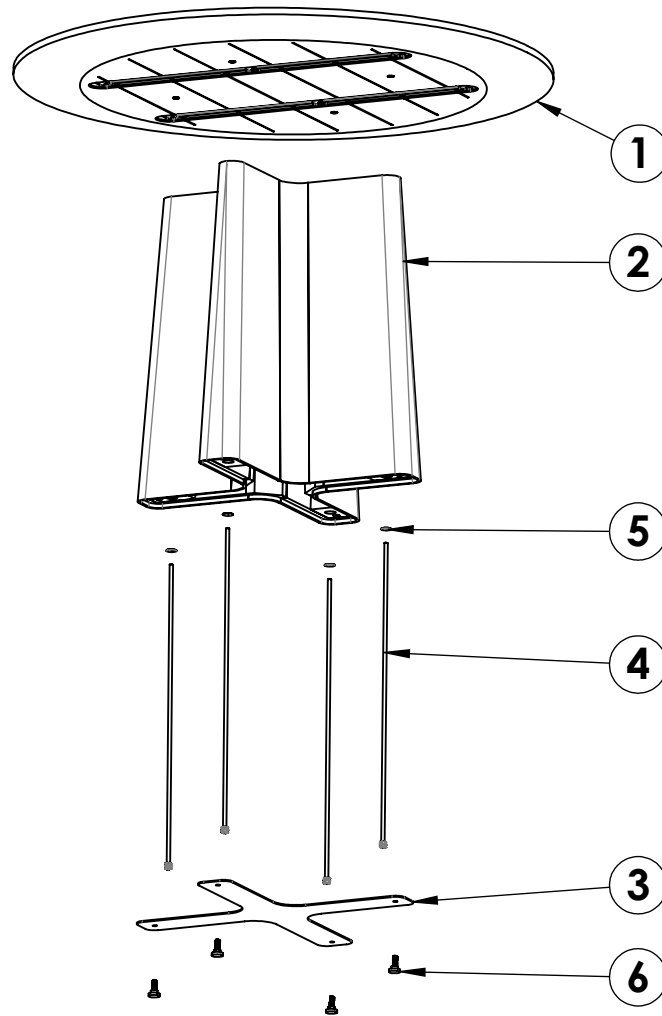

2 1x

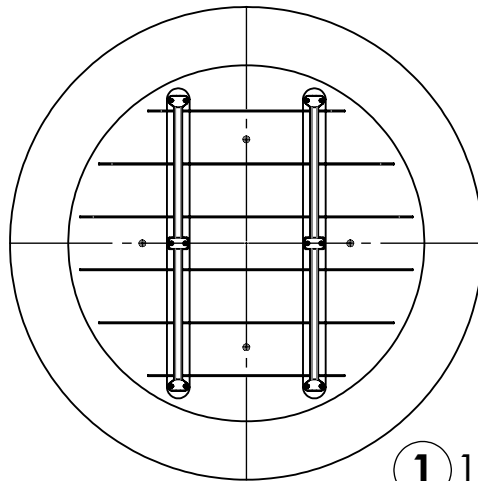


1 1x

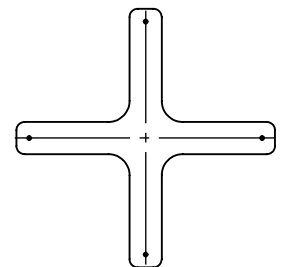


3 1x



5 4x

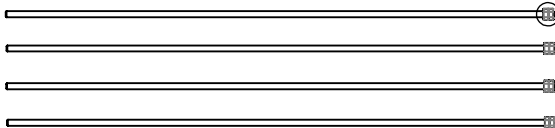


4 4x M8

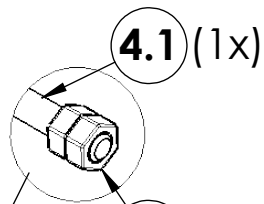


4.1 (1x)

4.2

(2x M8)



6 4x M8



7 1x

>13<

