


JAVORINA

DESIGNED BY ROOTS

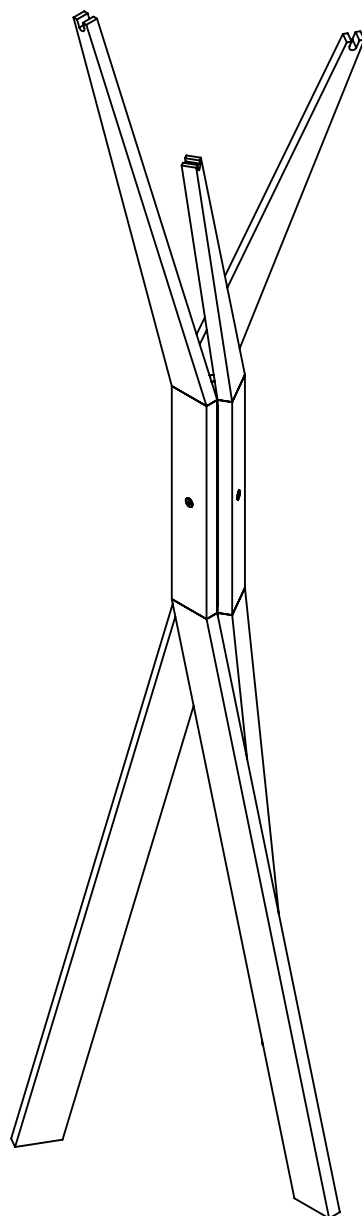


FC170

**assembly instructions
návod na montáž**

V000033-1




5 min.

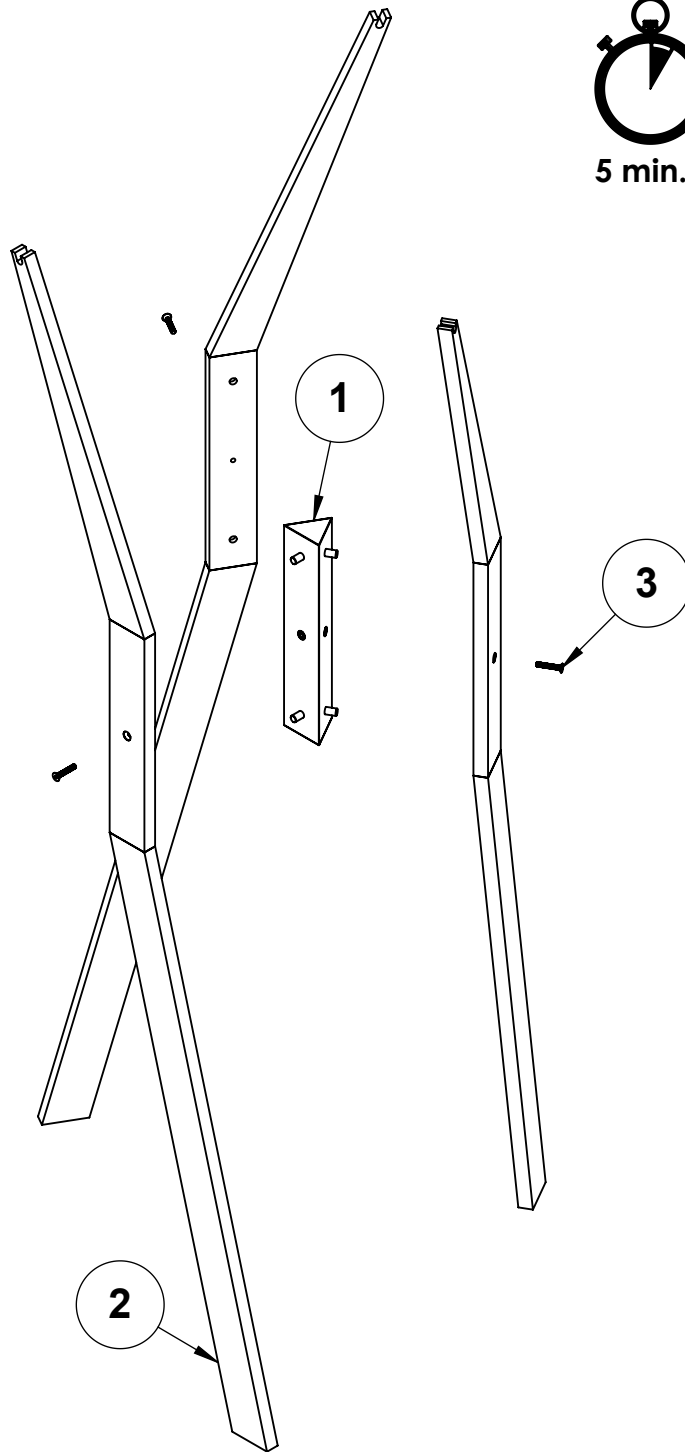

2 3x

2A

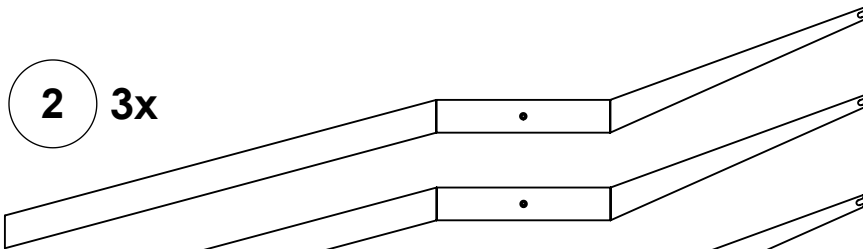

2B

2C

3






3x M6





1 1x



4 1x



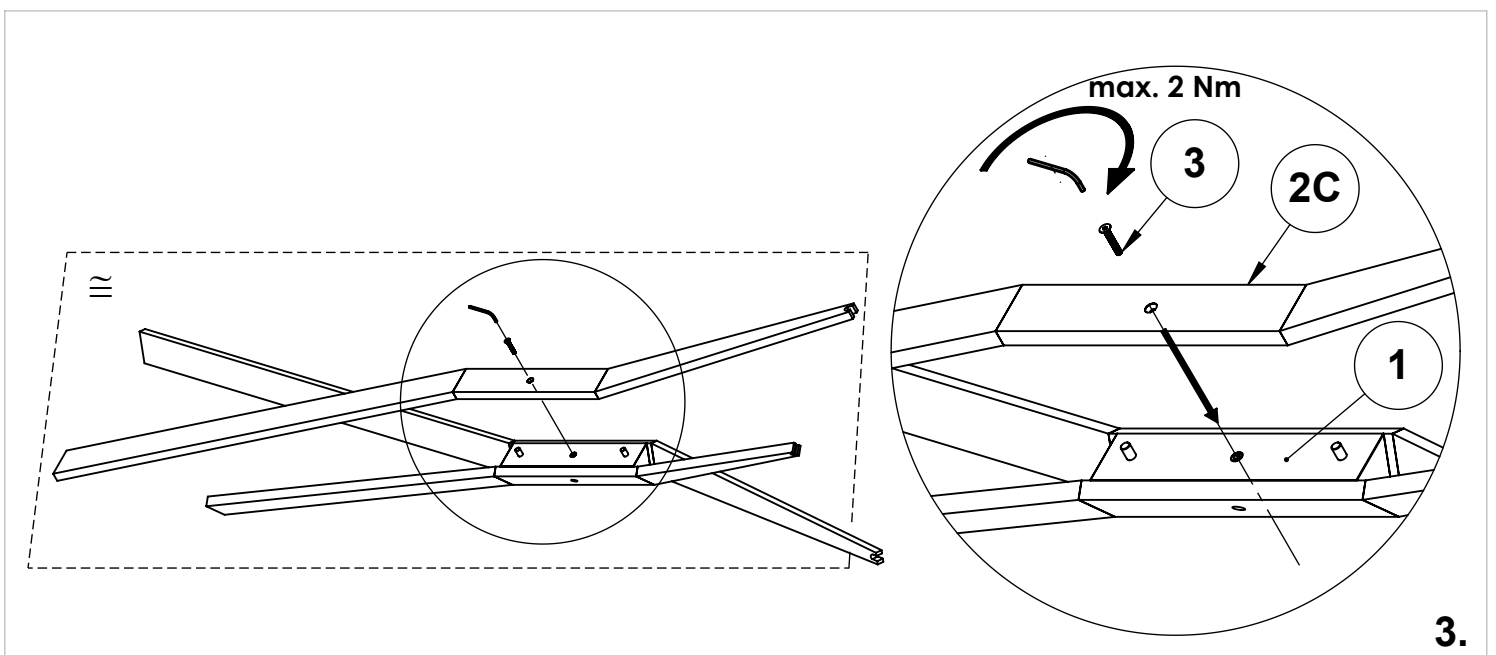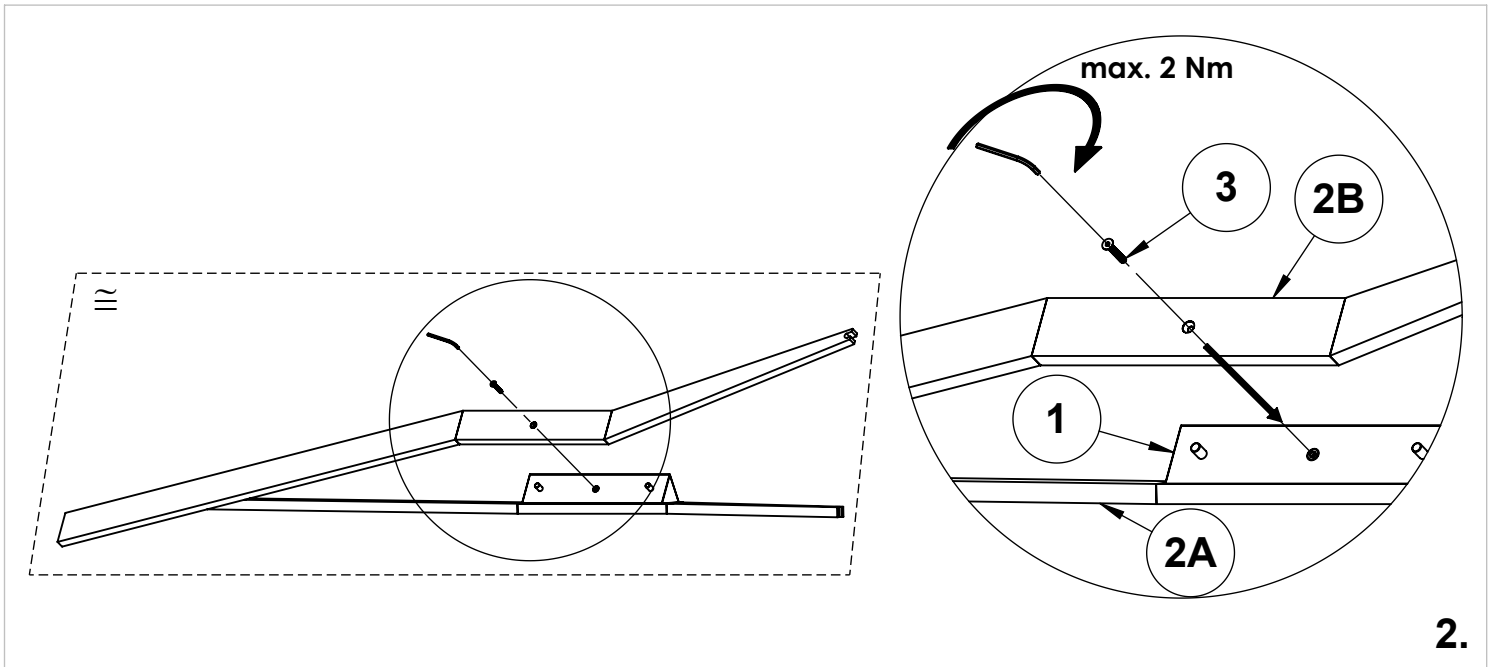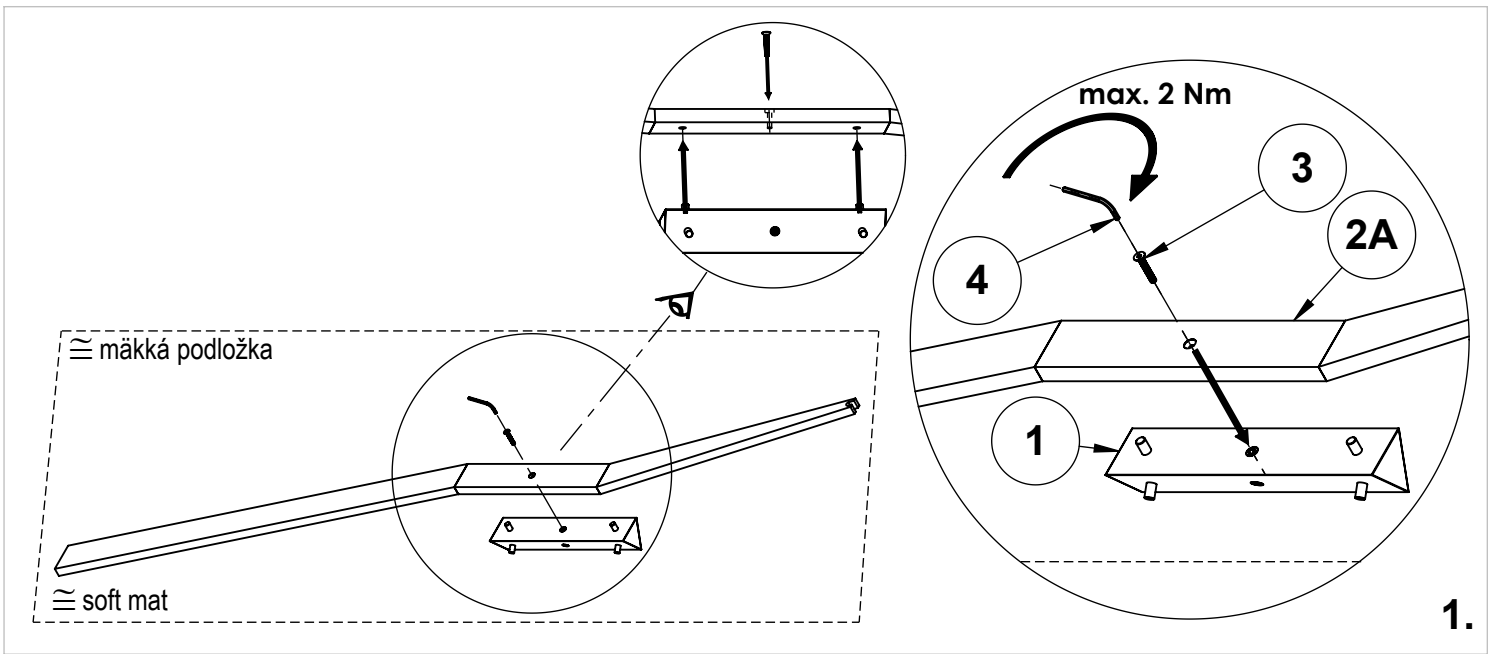

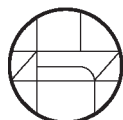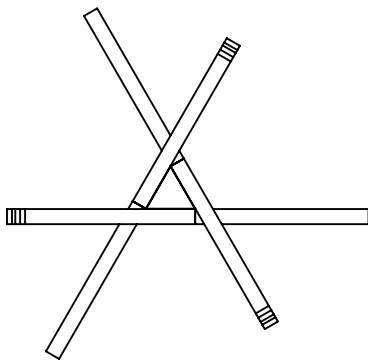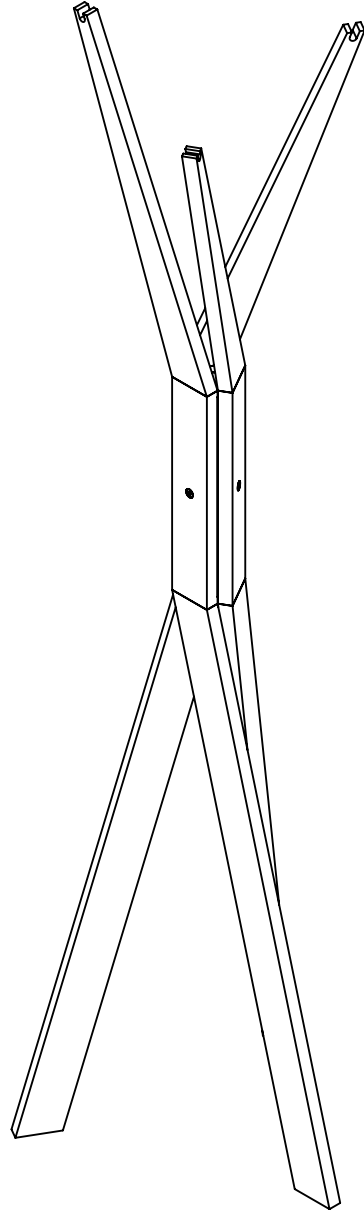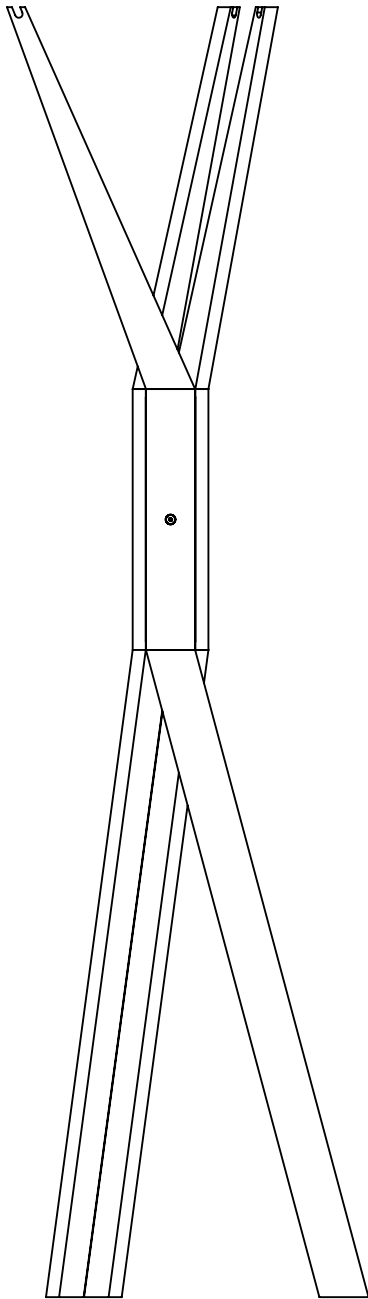

EST. 1947

JAVORINA

DESIGNED BY ROOTS

V000033-4