



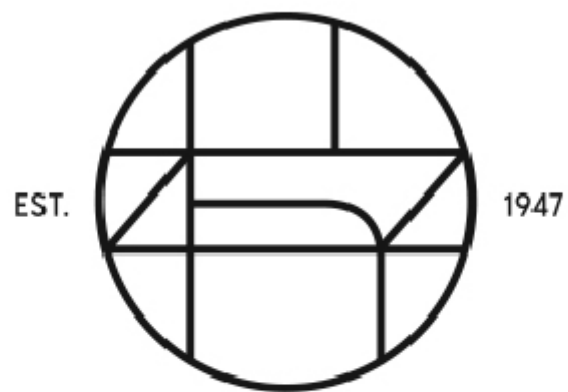

JAVORINA


DESIGNED BY ROOTS

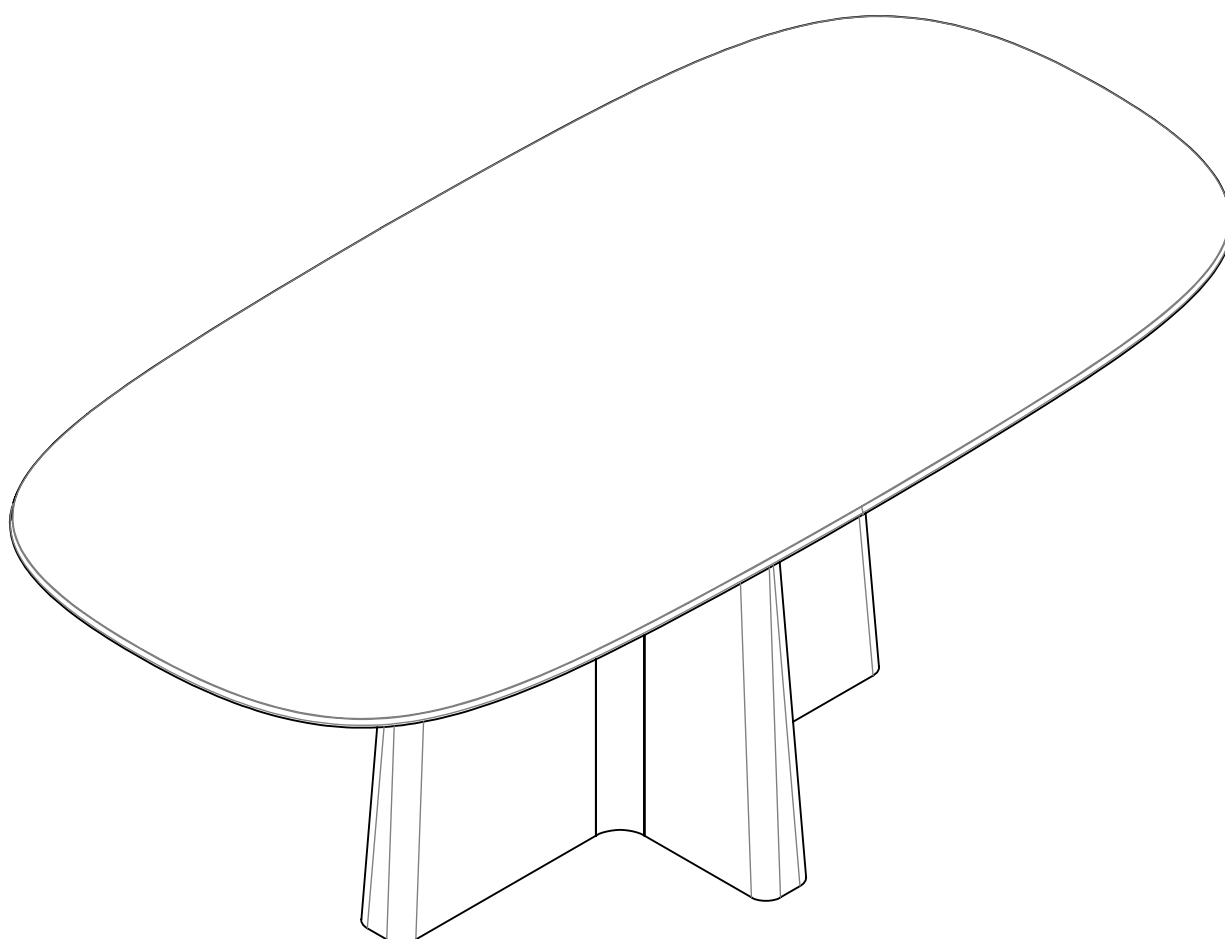



XXT200

**assembly instructions
návod na montáž**


V000097-1

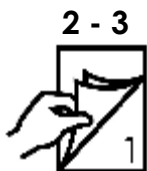


15 min.

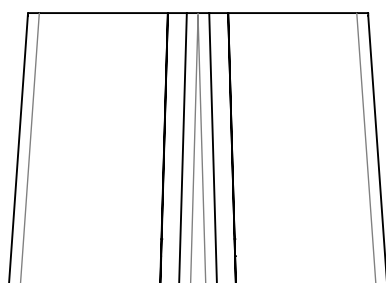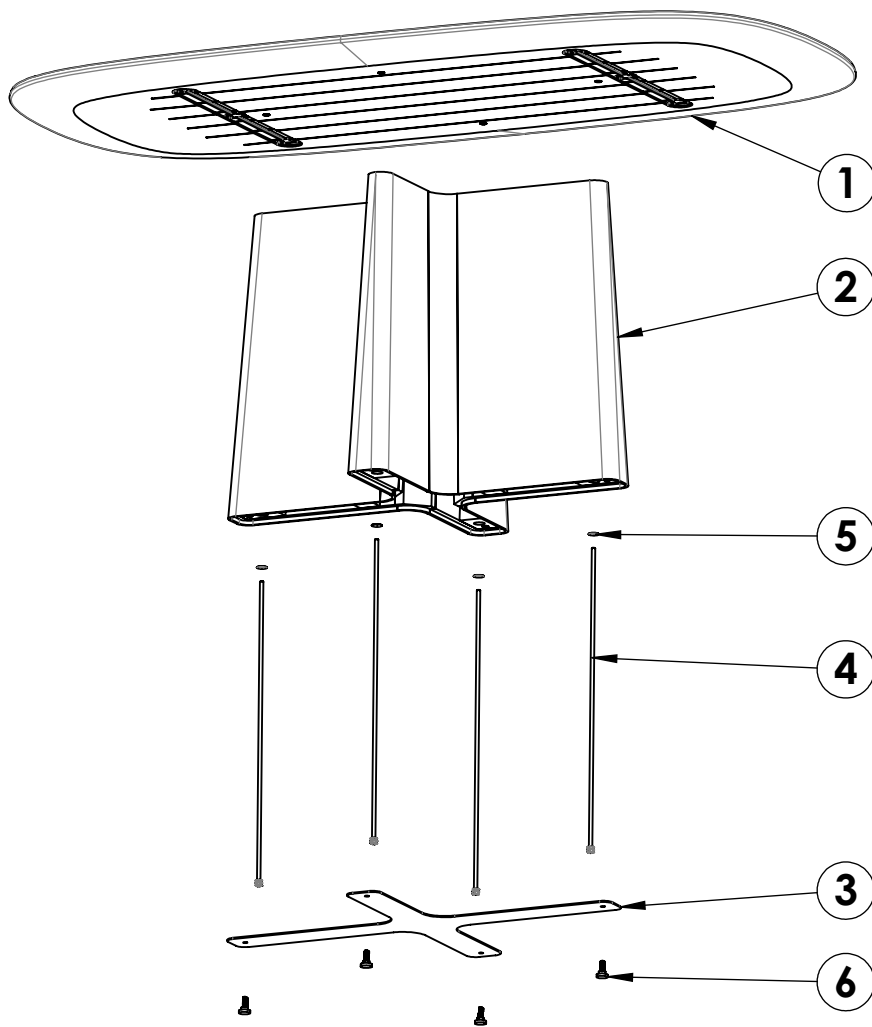

② 1x

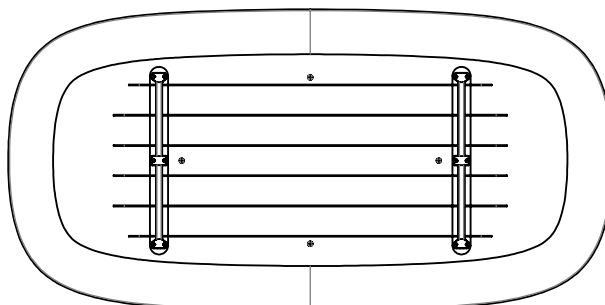


① 1x

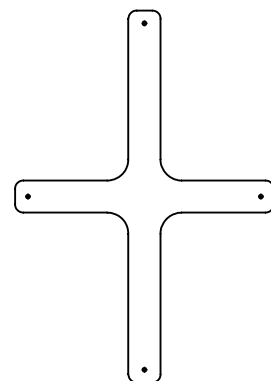


③ 1x



⑤ 4x

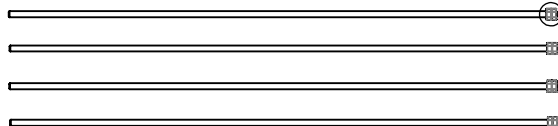

④ 4x M8

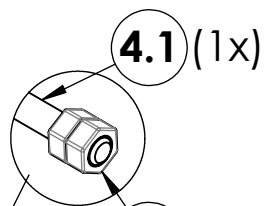


④.1 (1x)

④.2

⊕ (2x M8)




⑥ 4x M8



⑦ 1x


>13<

V000097-2

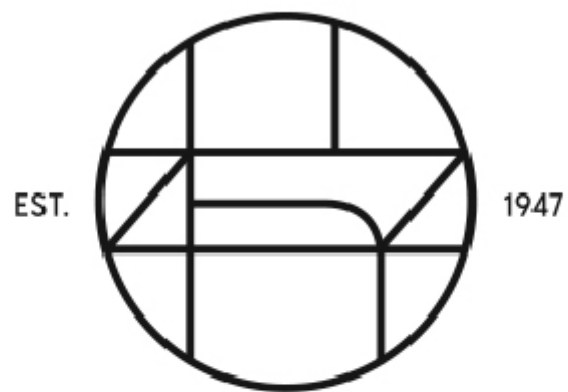

JAVORINA



DESIGNED BY ROOTS

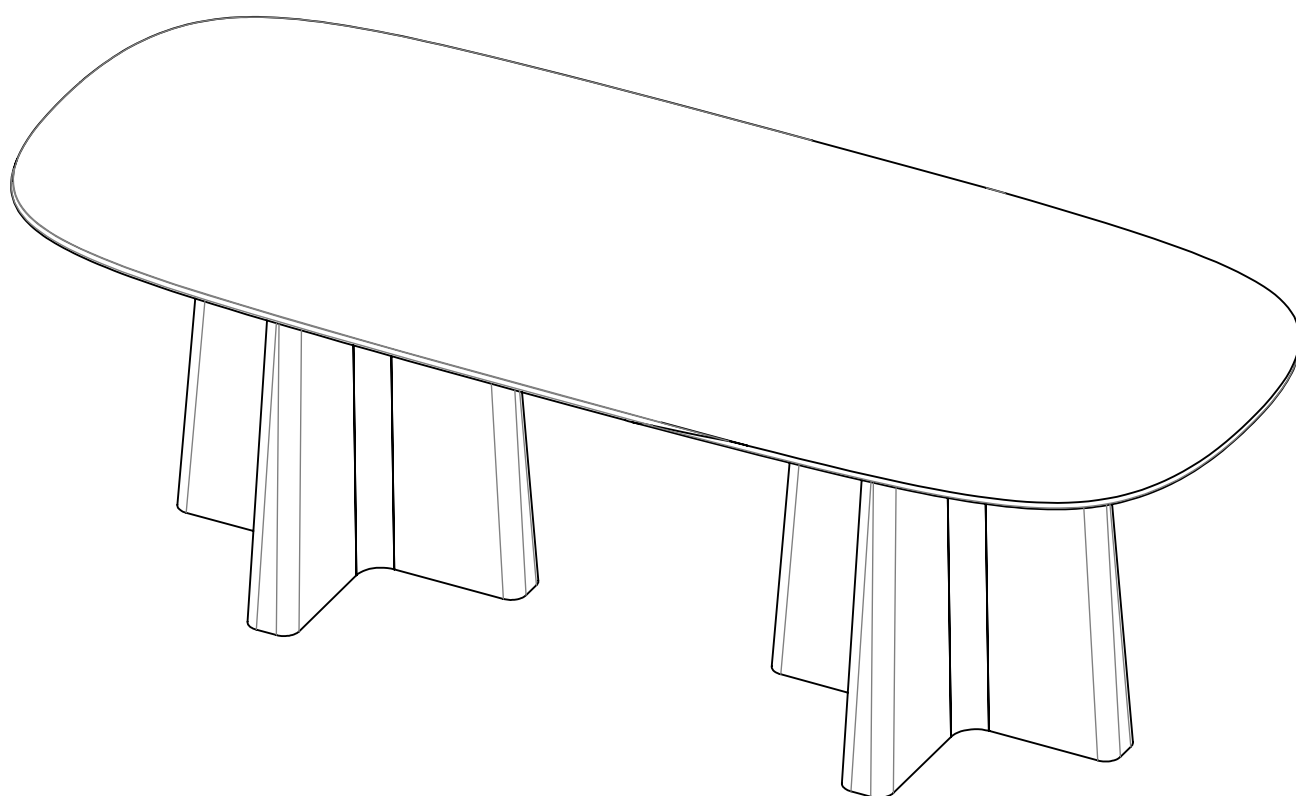



XXT240

**assembly instructions
návod na montáž**



V000070-1

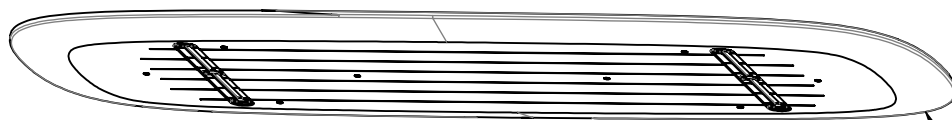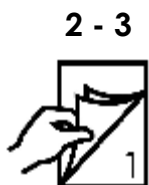

1

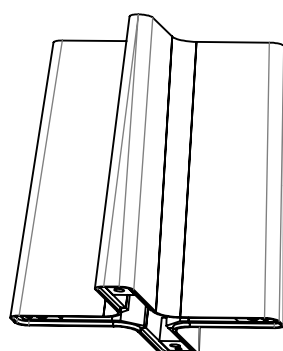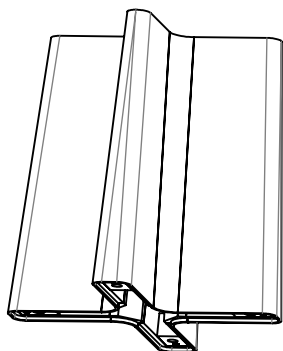

2

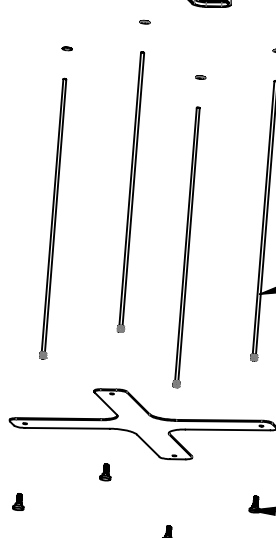
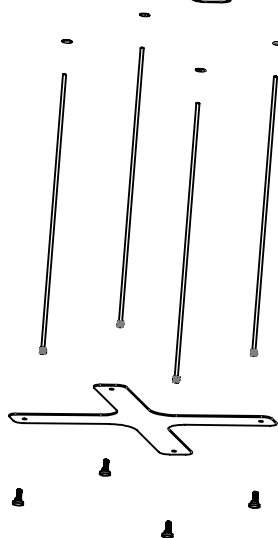


5


4

3


6

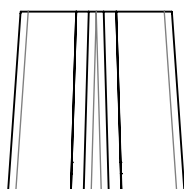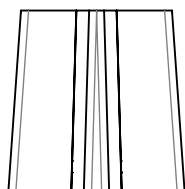


2 2x

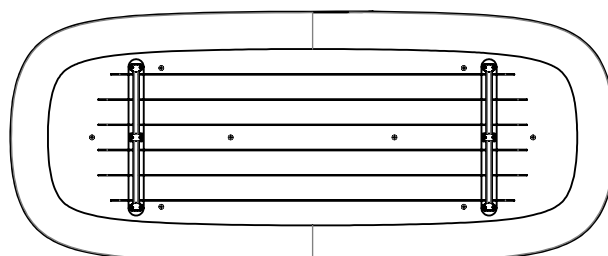


1 1x

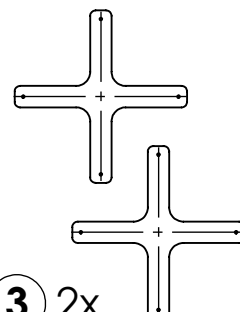


3 2x

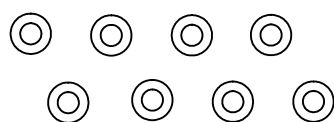

5 8x

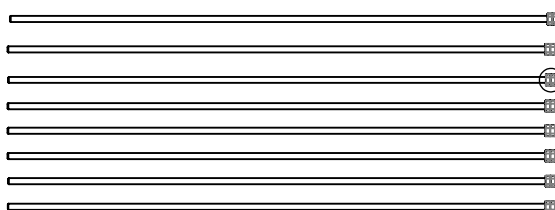


4 8x M8

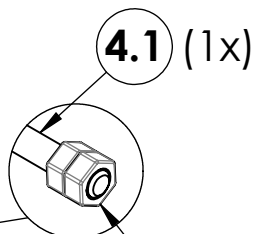


4.1 (1x)

4.2

(2x M8)

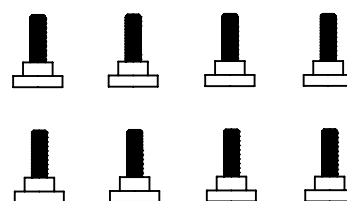









6 8x M8



7 1x







>13<

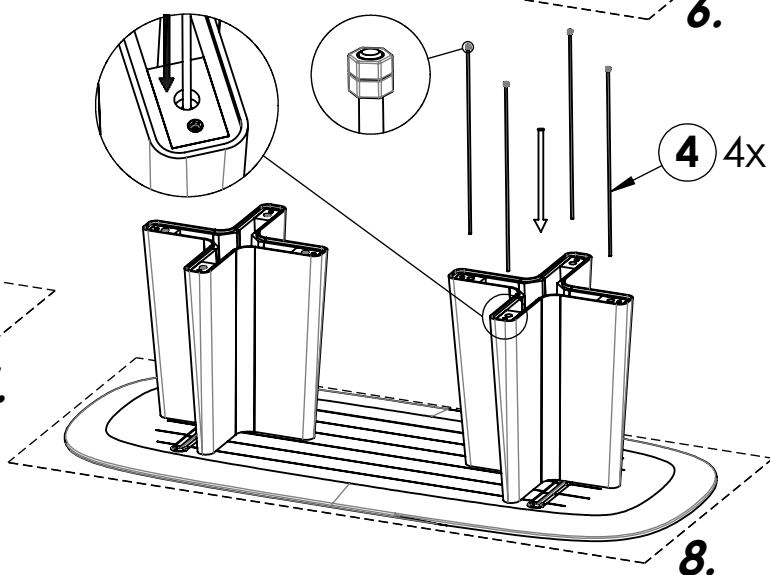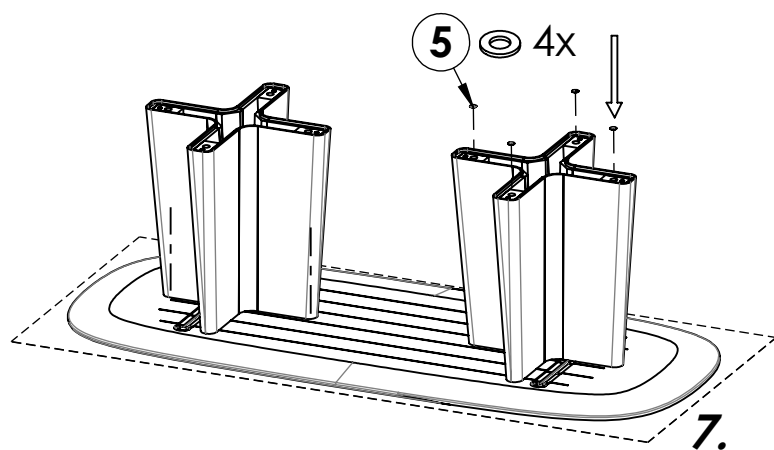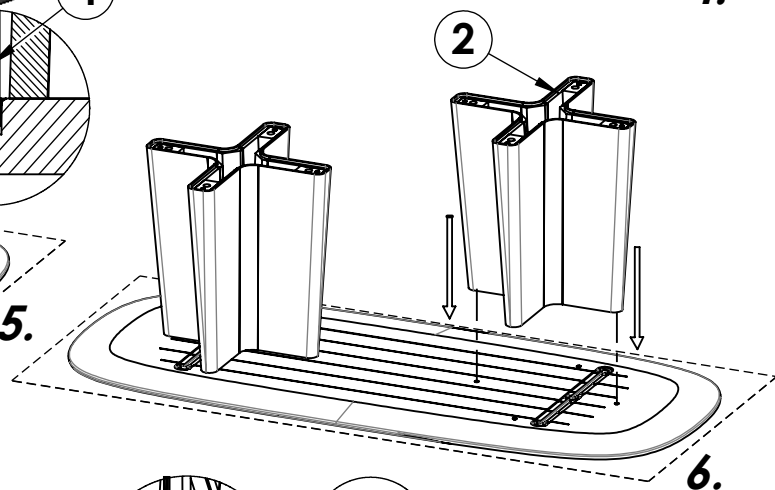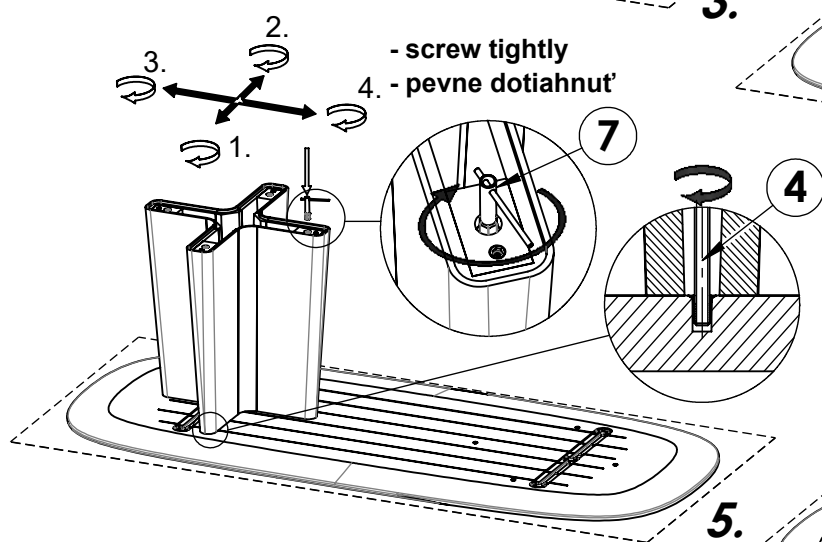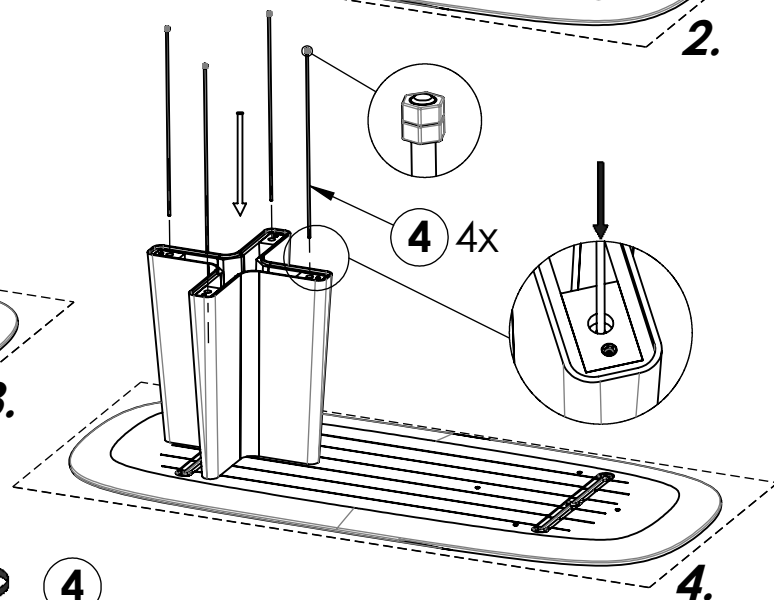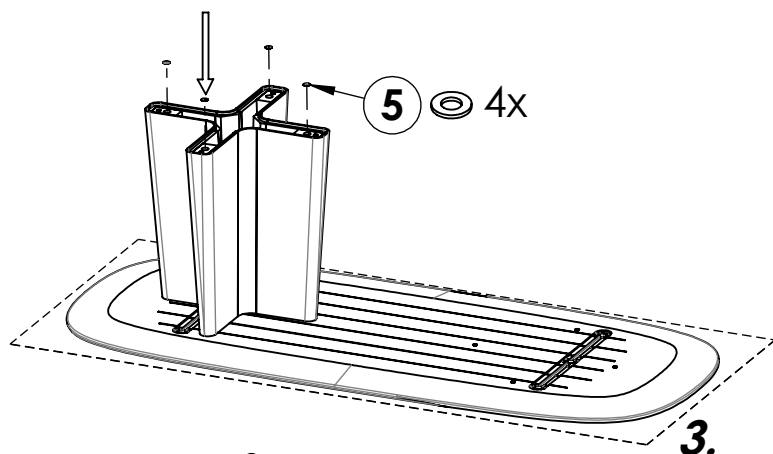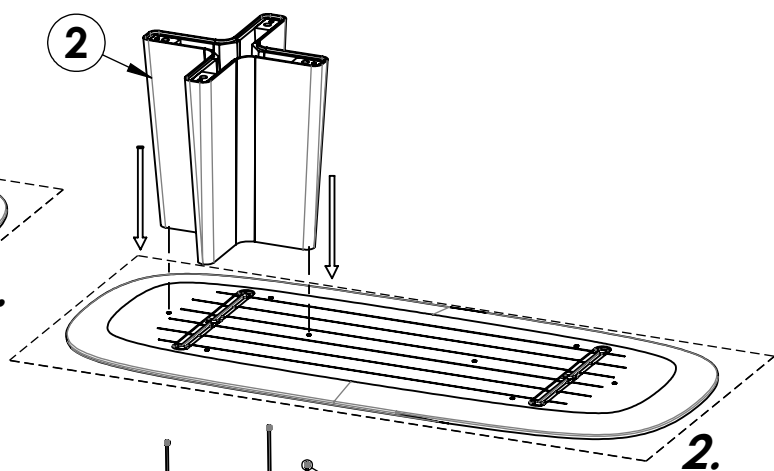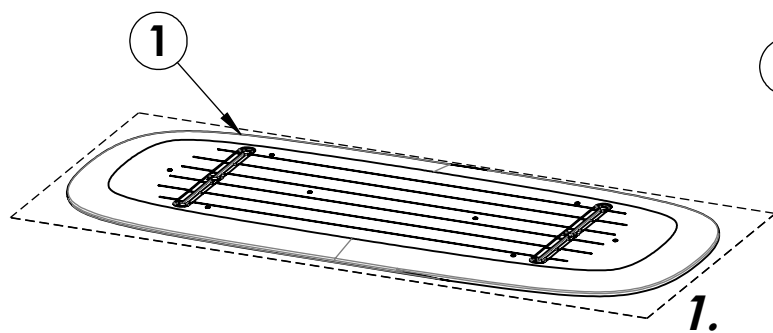



- screw tightly

- pevne dotiahnut'

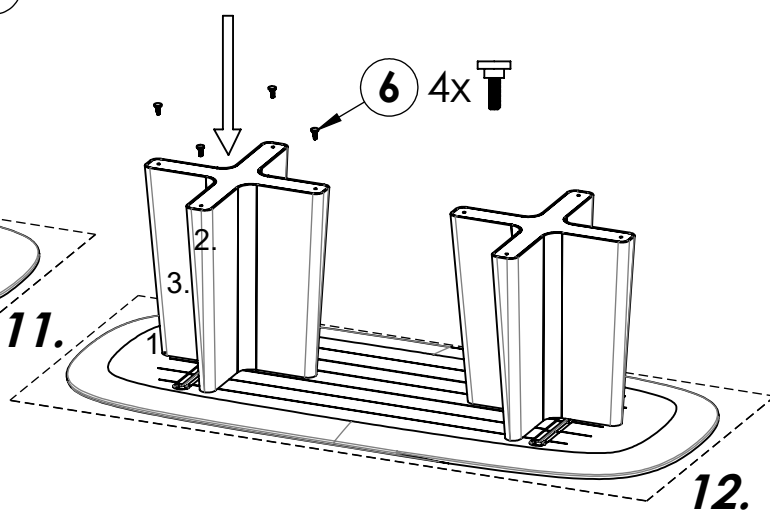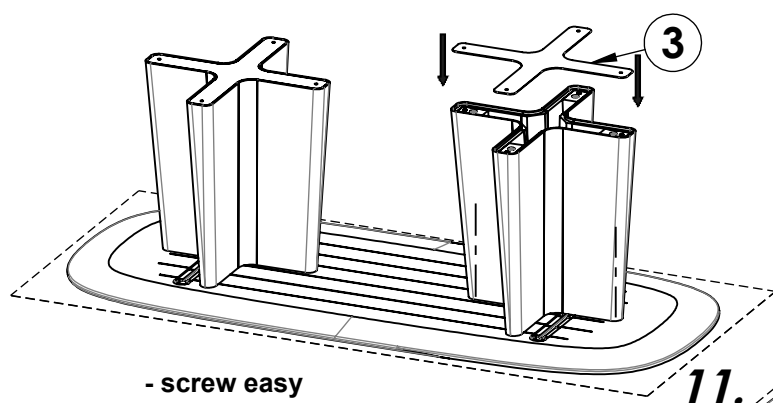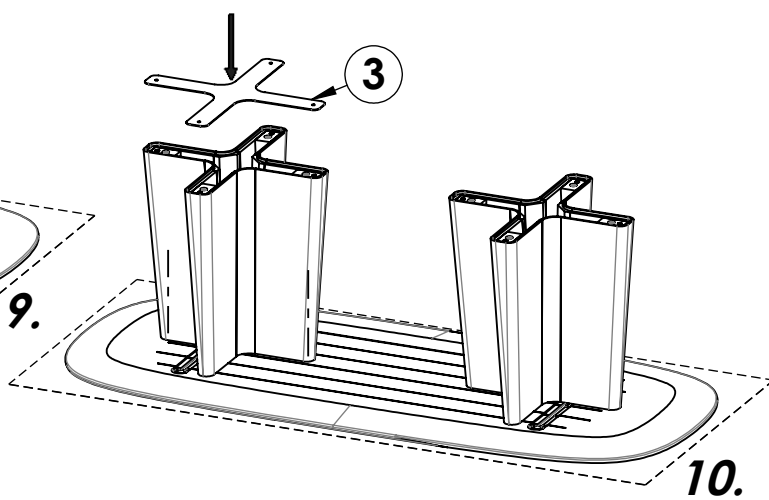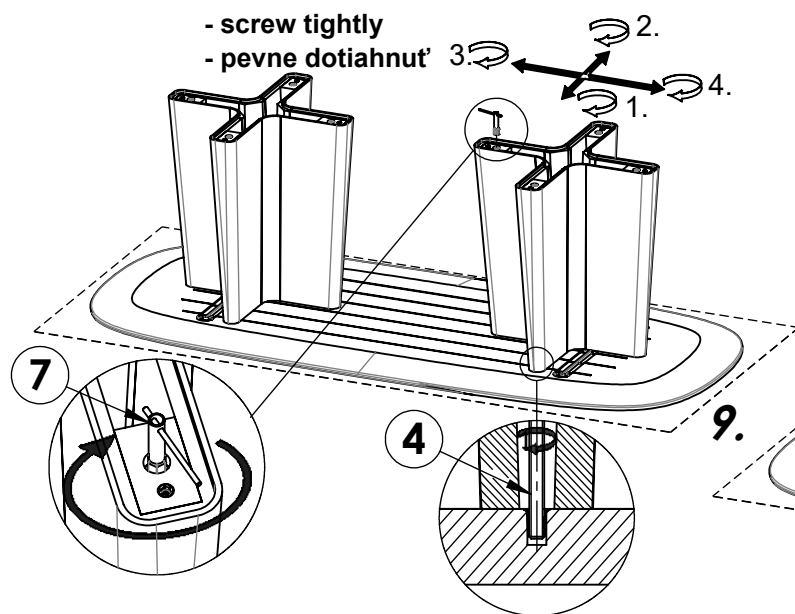

- screw easy

- dotiahnut' voľne

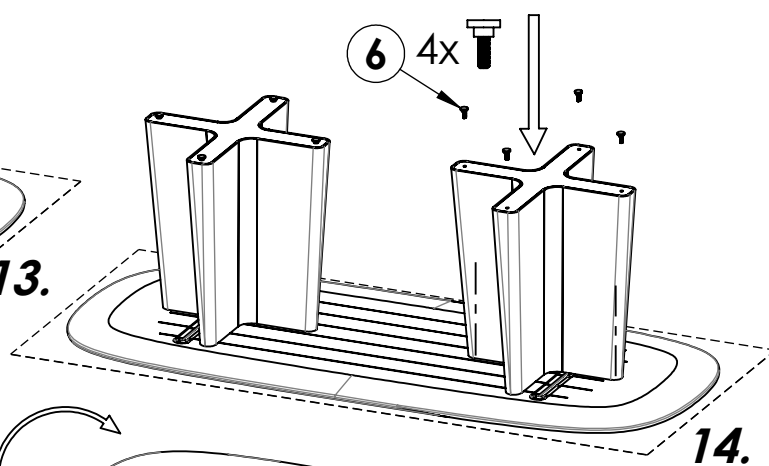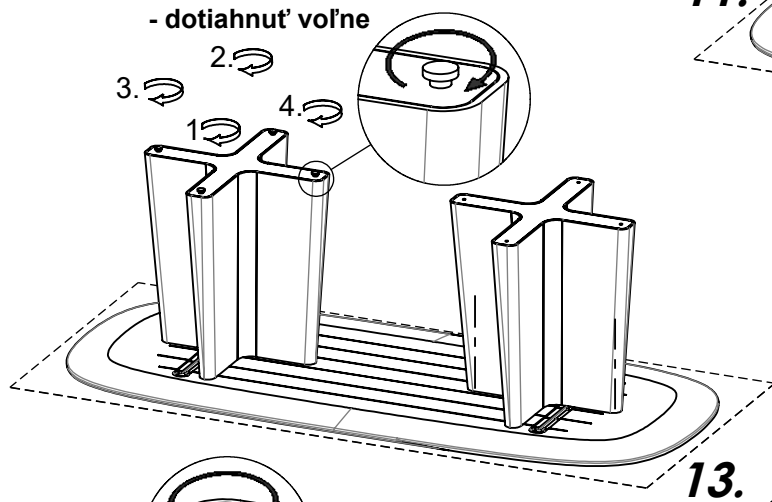

- screw easy

- dotiahnut' voľne

