



# JAVORINA


DESIGNED BY ROOTS

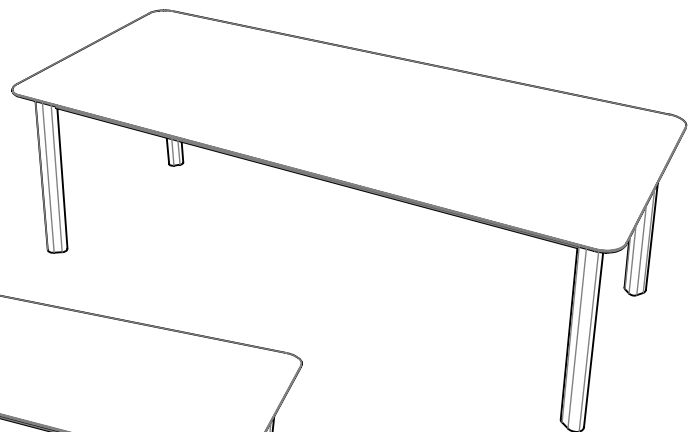

**MT 240**

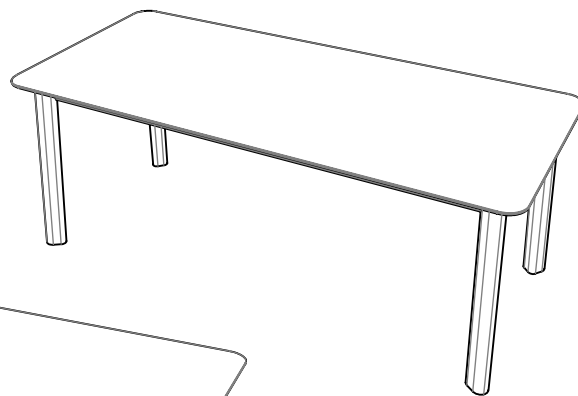

**MT 200**

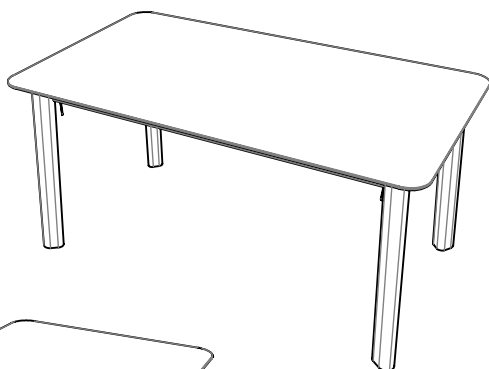


**MT 160**



**MT 90**

assembly instructions  
návod na montáž


V000102-1

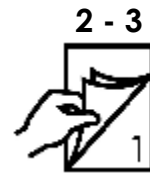


2 - 3




15 min.

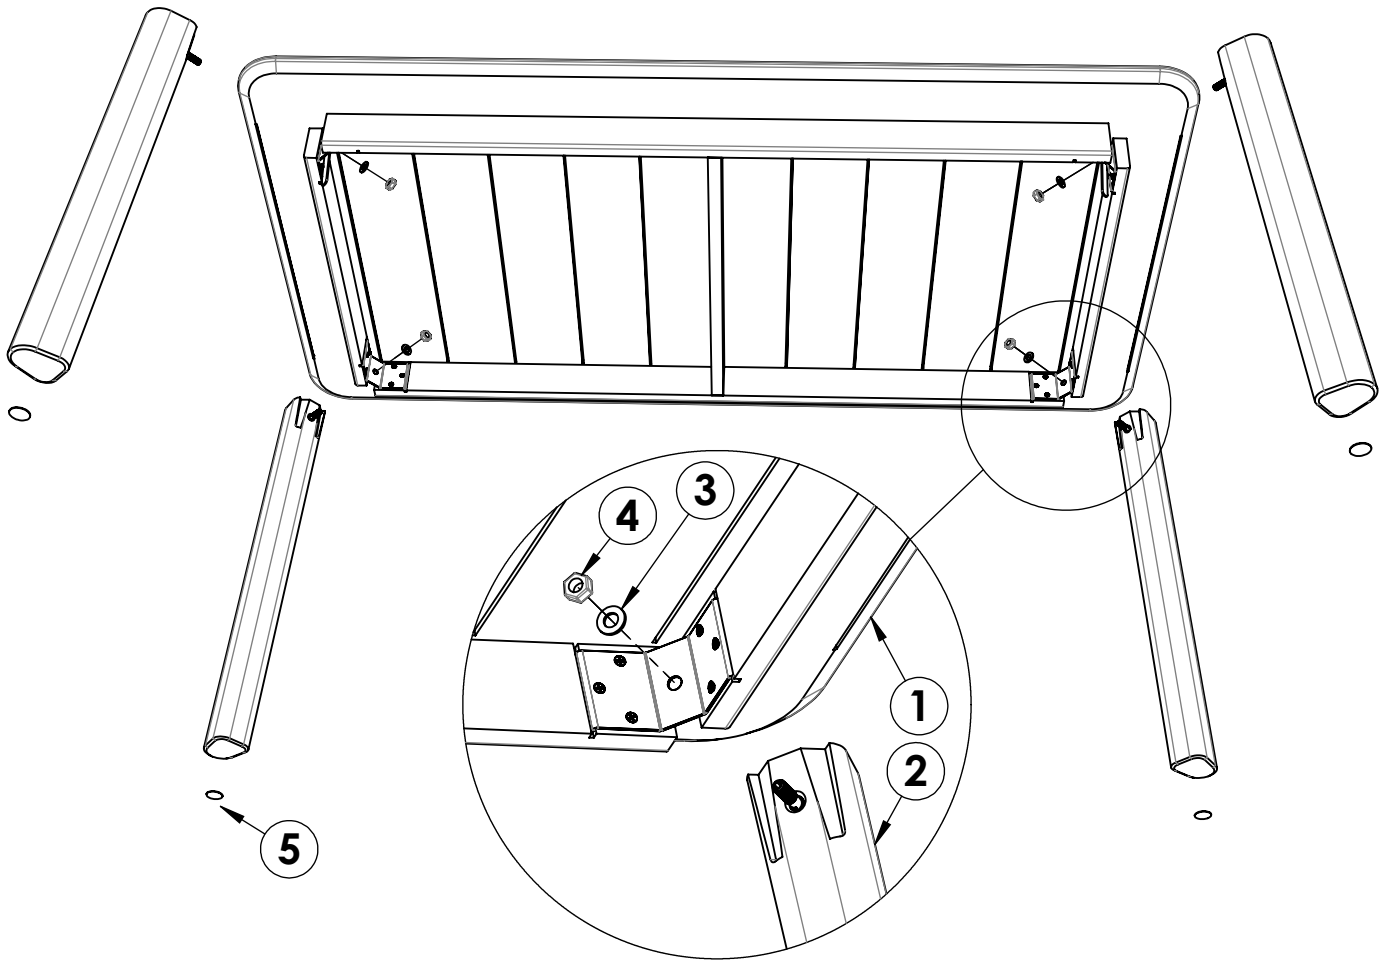


2 4x

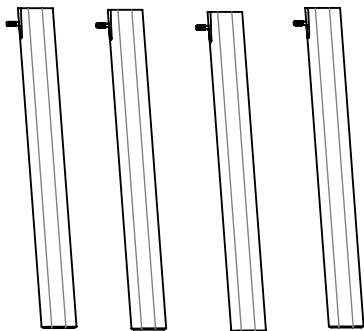

1 1x


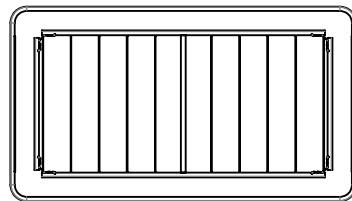


variant -MT 160

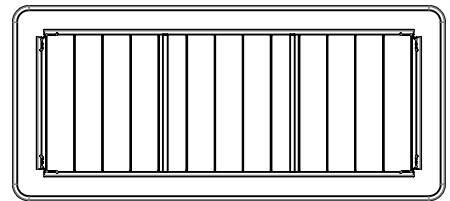


variant -MT 200

3 4x

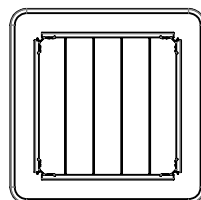


variant -MT 90

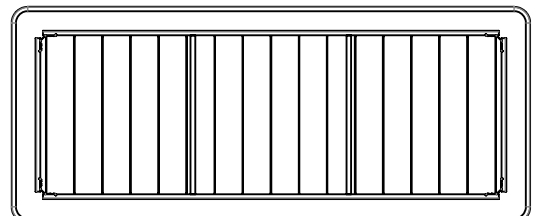


variant -MT 240


4 4x M10



5 4x



6 1x



V000102-2

